


Wraparound boxes - KS 1

Folding instructions

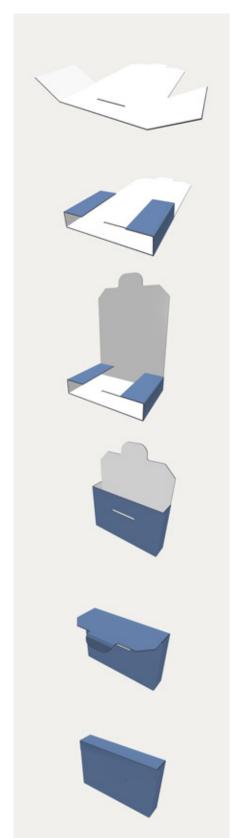

- The precut pattern of your folder tzpe wraparound box segment should be placed on the table with the natural white coloured side facing towards you.
- 2. Fold all the prefluted edges vertically at a 90 degree angle, once facing upwards and thereafter back again. Set up the side segments of your box right-angled. Bend the side segments inwards over the edges.
- 3. Bend the backside flap segment upwards.
- 4. Place your wraparound folder segment length-wsie in an upright position.
- 5. Now close the folder segment by inserting the backside flap into the slit provided.
- 6. Picture 6 demonstrates a closed wraparound box "KS 1".

We have manufactured your product with utmost care and accuracy. Should you still have difficulties in folding your folder type box, please do not hesitate to contact us. We will gladly assist you.

Please visit the following site for the animated version of the folding instructions: www.movies.klug-conservation.com

KLUG-CONSERVATION

Zollstraße 2 87509 Immenstadt/Germany Tel. +49 (0)8323 9653 30 www.klug-conservation.com

