


Technical data sheet

Determination of grammage of paper and board material

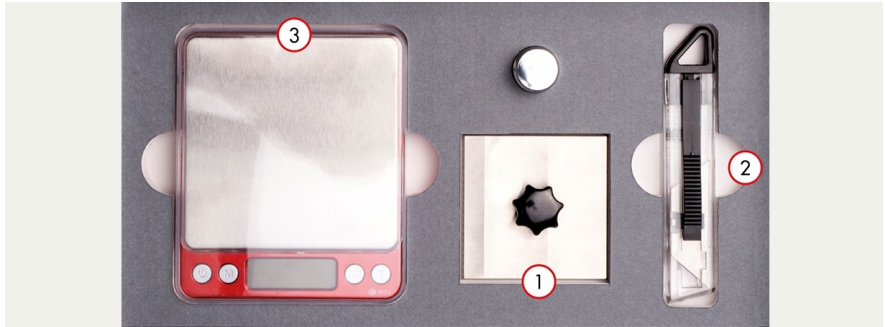

Specifications:

The grammage of paper, board or corrugated board can be determined very easily. A rectangular sample piece is cut and weighed using a digital paper scale.

Sizes ex-stock:

Material characteristics:

- The set for determination of grammage consists of: digital scale, cutter knife, cutting template, calibration weight, instructions.

Remarks:

1. Place square cutting template (1) on test material.
2. Cut along template using cutter knife (2). You now have a sample with an area of 50 cm².
3. Place balance (3) on an even surface. Calibrate before first use. (See enclosed directions for use)
4. Switch on balance, place sample on balance and read weight.
5. Rule of thumb: Weight x 200 equals Grammage in gsm.

Please contact our colleagues in the Sales Department if you have any questions, would like to make a suggestion, or require help. Telephone +49 (0)8323 9653 30, E-mail info@klug-conservation.com.

Further information, such as our Quality Guarantee, certificates of independent testing institutions and information regarding application methods and instructions are stated on our website klug-conservation.com.